

SOLEX with SWING ARM BBQ RACK INSTRUCTIONS



FIREPITS UK

HANDMADE IN BRITAIN



UNIQUE HAND-FORGED BRITISH MADE FIRE PITS

CAUTION: The steel of the fire pit will get hot – do not touch without heat resistant gloves

Your fire pit will be coated in manufacturing oil when it is delivered but don't worry as this will burn off with your first fire. However, we recommend seasoning the Swing Arm BBQ Rack prior to use to remove the oil. Heat to a medium temperature and wash with warm soapy water. Dry thoroughly and rub over with a small amount of cooking oil.

1. Light your fire at least 30 minutes before you want to cook, using kindling and kiln dried logs to reduce smoke. Build a large fire so it creates enough hot embers to cook over.
2. Use an ash rake to split the fire, with hot embers to one side and the burning fire to the other. Keep feeding the fire with logs to keep the flames burning.
3. Add your swing arm BBQ rack when you are ready to start cooking. The swing arms are designed to be used over the embers and not the open flames.
4. The rack can swing from side to side allowing you to direct it over and away from the heat giving maximum cooking control.
5. Remove the swing arm when you've finished cooking and set to one side while you build up the fire to enjoy the warmth into the evening.

To clean your swing arm and any other Firepits UK cookware, wash the item well and dry thoroughly. Rub over some cooking oil before storing away. If any rust develops, scrub this off with a wire brush and repeat the seasoning process above.

Your fire pit is designed to live outdoors all year round and over time it will develop its own natural patina. If you wish to you can rub over with a wire brush and then oil. However, it is fine to leave them outside and allow them to take their natural course.

Please be aware that as the fire pits will oxidise, rust can mark stone terraces and paving slabs. If placed on a lawn, the heat from the fire may scorch the grass underneath.